




RICE/MULTI-COOKERS & WARMERS



WRC40

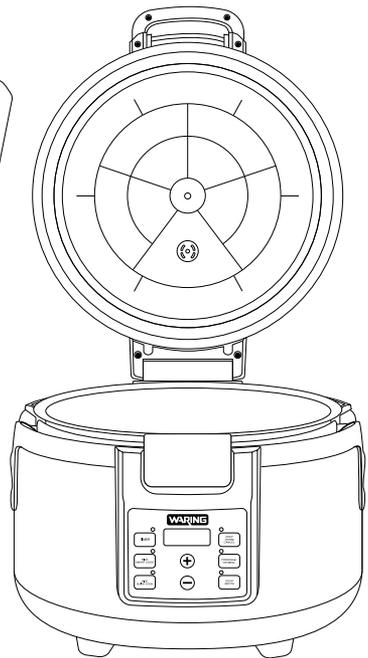

WRC60

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS.**
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning the use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure they do not play with the appliance.
4. Do not touch hot surfaces. Use handles or knobs. Use pot holders when removing hot containers.
5. To protect against risk of electrical shock, do not immerse cord, plug, or base in water or other liquids.
6. **Unplug from outlet when not in use. Unplug before putting on or taking off parts and allow to cool before cleaning.**
7. Avoid getting the interior of the housing wet as this can damage the heating element.
8. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors.
11. Do not let cord hang over edge of tables or counters, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner or in a heated oven.
13. Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids. Do not use lid handle to carry cooker when contents are hot.
14. To disconnect, remove the plug from the wall outlet.
15. Do not use appliance for other than intended use.
16. Lift and open cover carefully and slowly to avoid scalding and to allow condensation to drip into the cooker. Contents can be extremely hot, and steam can cause burns.
17. **WARNING:** Risk of electric shock.
18. Do not place the unit directly under cabinets when operating as this product produces large amounts of steam. Avoid reaching over the product when operating.
19. Cook only in the removable inner pot.
20. Only use the inner pot provided.


SAVE THESE INSTRUCTIONS APPROVED FOR COMMERCIAL USE

CONTENTS

Important Safeguards	2
Grounding Instructions.....	3
Special Cord Set Instructions	3
Special Features.....	4-5
Using Presets	6
Control Panel.....	6
Cooking	7
Tips.....	8
Troubleshooting.....	8
Cleaning & Maintenance	9
Warranty	9

GROUNDING INSTRUCTIONS

For your protection, Waring® Rice/Multi-Cookers & Warmers are supplied with a molded, 3-prong grounding-type plug and should be used in combination with a properly connected grounding-type outlet as shown in the illustration at right.

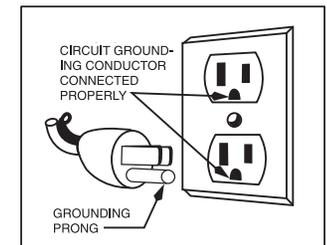

SPECIAL CORD SET INSTRUCTIONS


A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or animals, or tripped over.

CONTROL PANEL


TIMER: The TIMER feature allows you to program a delayed start time for any function.

SPECIAL FEATURES – WRC40

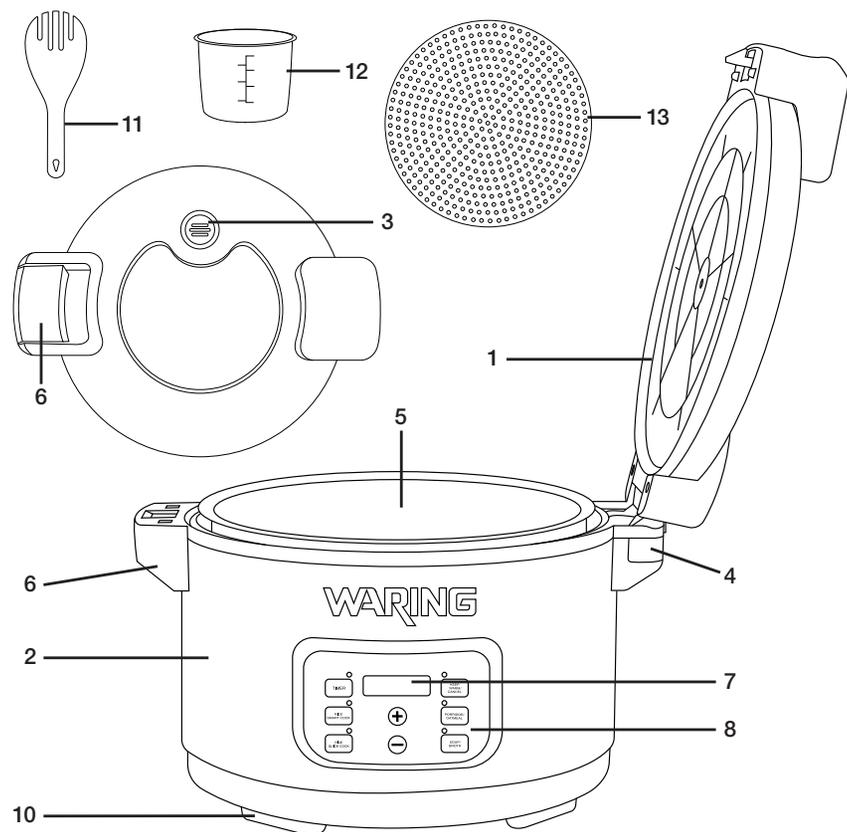

1. Heated hinged lid
2. Insulated double-wall brushed stainless steel housing
3. Steam vent
4. Moisture cup
5. Removable nonstick ceramic coated inner pot
6. Handle/latch
7. Countdown timer
8. Control panel
9. Power cable and plug (not shown)
10. Nonslip rubber feet
11. Rice paddle
12. Measuring cup
13. Silicone anti-scorch pad

SPECIAL FEATURES – WRC60

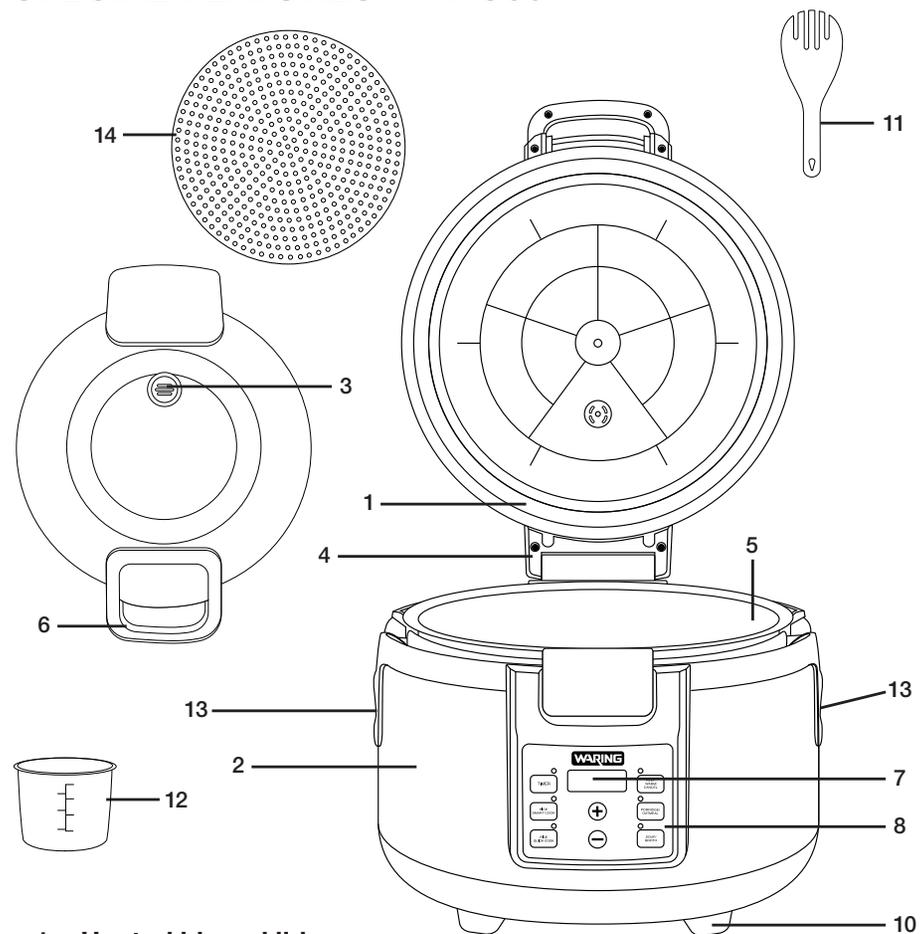

1. Heated hinged lid
2. Insulated double-wall brushed stainless steel housing
3. Steam vent
4. Moisture cup (not shown)
5. Removable nonstick ceramic coated inner pot
6. Latch
7. Countdown timer
8. Control panel
9. Power cable and plug (not shown)
10. Nonslip rubber feet
11. Rice paddle
12. Measuring cup
13. Carry handles (1 on each side of unit)
14. Silicone anti-scorch pad

RICE SMART COOK: Smart Cook is the standard rice cooking function that preheats, soaks, and cooks your rice to its maximum texture and highest quality.

RICE QUICK COOK: Quick Cook prepares rice faster by cooking directly, without the preheating or soaking steps.

KEEP WARM/CANCEL: Keep Warm mode activates when a cooking cycle ends or when the function is activated on its own. Keep Warm remains active for up to 8 hours. Press this control to end Keep Warm or a cooking cycle. Press the cancel button to exit any function.


PORRIDGE/OATMEAL: Cook various grain recipes such as porridge, oatmeal, quinoa, and many more.

SOUP/BROTH: Cook soups and broths, setting the timer manually.

USING PRESETS

TIMER PRESET

1. Select one of the four cooking options.

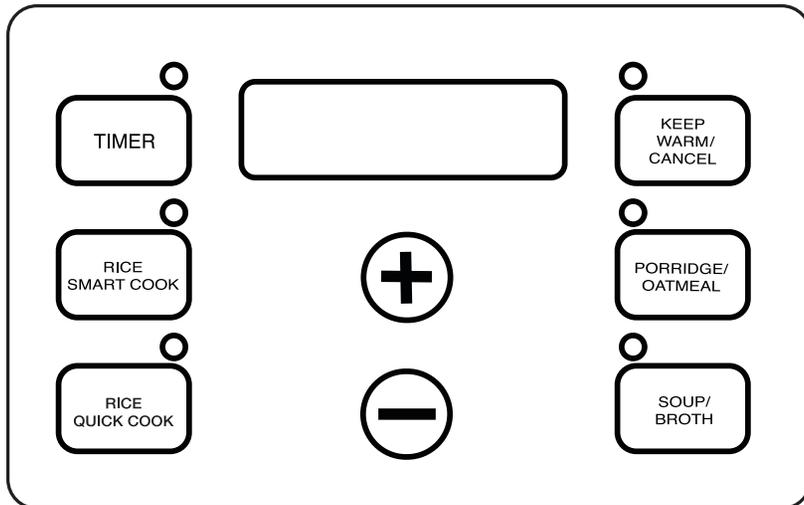

2. Press the TIMER button.
3. Use the “+” and “-” keys to set your delayed start time (30 minutes to 24 hours).
4. Once your delayed start time is selected, wait 3 seconds for the timer to begin.

COOKING PRESETS

Smart Cook

- Press the RICE SMART COOK button to activate.
- The display will show “S 18,” the default steam time of 18 minutes.
- Adjust the steam duration using the “+” or “-” buttons.
- After confirming your time, the rice cooker will automatically begin cooking.
- Once cooking starts, the display will show “RICE.”

Quick Cook

- Press the RICE QUICK COOK button to activate.
- The display will show “S 18,” the default steam time of 18 minutes.
- Adjust the steam duration using the “+” or “-” buttons.
- After confirming your time, the rice cooker will automatically begin cooking.
- Once cooking starts, the display will show “RICE.”

Porridge/Oatmeal

- Press the PORRIDGE/OATMEAL button to activate.
- The display will show “1:00,” the default heating time of 1 hour.
- Adjust the heating time using the “+” or “-” buttons.
- After confirming your time, the rice cooker will automatically begin cooking.
- Once cooking starts, the display will count down from your set time.

Soup/Broth

- Press the SOUP/BROTH button to activate.
- The display will show “:40,” the default heating time of 40 minutes.
- Adjust the heating time using the “+” or “-” buttons.
- After confirming your time, the rice cooker will automatically begin cooking.
- Once cooking starts, the display will count down from your set time.

KEEP WARM / CANCEL

Press the KEEP WARM/CANCEL button to maintain the temperature of rice, soup, or other foods for up to 8 hours.

To cancel or reset any function during cooking, press the KEEP WARM/CANCEL button. This will exit the current function or cook cycle immediately.

BEFORE FIRST USE

1. **Remove Packaging:** Unbox the cooker/warmer and remove any protective materials.
NOTE: The silicone anti-scorch pad, rice measuring cup, and rice paddle will be in the inner pot.
Check that all parts are included.
2. **Clean the Cooker:** Wash the inner cooking pot, lid, and other removable parts with warm soapy water. Wipe the exterior with a damp cloth. (See Cleaning and Maintenance section.)

PREPARING THE RICE

MEASURE THE RICE:

– Use the included cup (180ml standard rice cup*) to measure out the desired amount of rice. You may also use the measurement lines along the inner walls of the pot.

*1 rice cup = approx. $\frac{3}{4}$ U.S. standard cup (180ml)

RINSE THE RICE:

- Pour the rice into a bowl. Add cool water to cover the rice.
- Stir the rice gently, and then drain through a fine-mesh sieve.
Repeat this process until the water runs clear. The number of rinses needed will vary depending on the type and amount of rice.

COOKING RICE

1. Open the lid.
2. Place silicone anti-scorch pad at the bottom of the pot.
3. Put the rice into the inner pot, add the appropriate amount of water using the measurement lines along the inside of the inner pot, and then make sure the outer surface of the inner pot is dry.
4. Place the inner pot in the main body of the rice cooker, turning the inner pot left and right 2 or 3 times to ensure a good connection with the heating plate. Close and secure the lid.
5. Press the Rice Smart Cook or Rice Quick Cook button.
Adjust time if needed.
6. After the rice is cooked, countdown timer will elapse and buzzer will beep 5 times. The cooker will automatically enter Keep Warm mode.

7. Keep the lid closed on the Keep Warm function for five to ten minutes, and the rice will taste better. Allow the rice to rest for 5 to 10 minutes before serving.

COOKING OTHER FOODS

Your Waring® Rice/Multi-Cooker & Warmer is ideal for making oatmeal, porridge, soups, macaroni and cheese, quinoa, polenta, and stews.

1. Open the lid.
2. Add the ingredients, including water, to the inner pot, and then make sure the outer surface of the inner pot is dry.
NOTE: Be sure to stir ingredients and water thoroughly to avoid scorching and undercooking.
3. Put the inner pot in the main body of the rice cooker, turning the inner pot left and right 2 or 3 times to ensure a good connection with the heating plate. Close and secure the lid.
4. Press the Porridge/Oatmeal or Soup/Broth button. Adjust cooking time as needed.
5. After the food is cooked, countdown timer will elapse and buzzer will beep 5 times. The cooker will automatically enter Keep Warm mode.
6. Keep the lid closed for five to ten minutes. Allow the food to rest for 5 to 10 minutes before serving.

NOTE: Open lid slowly and carefully. Excess steam might be present and can cause burns.

TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
Indicator light does not light up.	Circuit power is not connected.	Check outlet functionality and that the unit is powered on.
	Line fault	Send to certified repair person.
Heating plate does not heat.	Circuit failure, blown fuse, or heating plate failure.	Send to certified repair person.
Overflow	Too much water used.	Remove some water.
E1	Sensor open circuit.	Check that sensor is plugged in.
E2	Sensor short circuit.	Change sensor.
E3	Dry burning.	Check that the pot contains food.
E4	Pot lid sensor open circuit.	Check that sensor is plugged in.
E5	Pot lid sensor short circuit.	Replace lid sensor.
EE	Inner pot is deformed.	Check if inner tank is directly heated.
		Check for materials between the heating plate and the inner pot.
Parts of food are not cooked properly.	Food is not properly coated with the water.	Be sure to thoroughly stir your ingredients together in the water prior to cooking. Undermixing can lead to undercooking or scorching in some areas of the pot.

CLEANING AND MAINTENANCE

It's important to clean the rice cooker after cooking food. Before cleaning, unplug the rice cooker from the outlet, and then allow the rice cooker to cool completely.

Remove the inner pot. Wash with a nonabrasive cleaner and sponge or cloth. Dry completely.

Remove and empty the moisture cup. Clean it with a brush and nonabrasive cleaner. Dry completely and then replace on the rice cooker. Do not clean the inner pot in a dishwasher. Use a soft, clean cloth to clean the lid and body.

Do not clean with abrasive materials that can cause scratches. Do not immerse the pot or plug in water.

Do not put water inside the rice cooker.

Do not clean the control panel with wet sponges or cloths or detergents. Wipe clean with a dry cloth. Dry outside of pot completely. Leaving it wet can damage the heating element.

LIMITED ONE-YEAR WARRANTY

(U.S. and Canada only)

Waring warrants every new Waring® Rice/Multi-Cooker & Warmer to be free from defects in material and workmanship for a period of one year from the date of purchase when used with foodstuffs, nonabrasive liquids (other than detergents), and nonabrasive semiliquids, providing it has not been subject to loads in excess of the indicated rating.

Under this warranty, Waring will repair or replace any part that, upon our examination, is defective in materials or workmanship, provided the product is delivered prepaid to any Factory Approved Service Center.

This warranty does not: a) apply to any product that has become worn, defective, damaged, or broken due to use or due to repairs or servicing by other than the Waring Service Center or a Factory Approved Service Center, or due to abuse, misuse, overloading, or tampering; or b) cover incidental or consequential damages of any kind.

Warning: This warranty is void if appliance is used on direct current (DC).



WARING
314 Ella T. Grasso Ave.
Torrington, CT 06790

©2025 Waring
314 Ella T. Grasso Ave.
Torrington, CT 06790

www.waring.com

Printed in China
WRC40/WRC60 IB
25WC94851

IB-18834